 



Quick Start Guide

Welcome, MatiGard™ is ready.


Designed for home arming.
Easy to set and use by the incredible app Magictl™.

In the Box

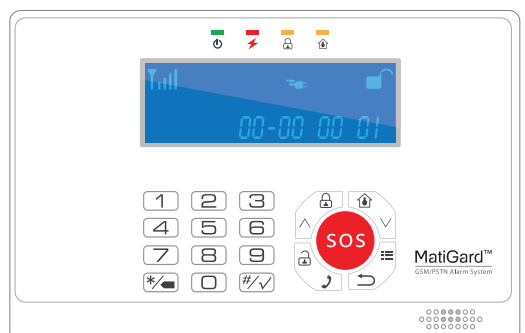

1 Insert SIM Card & Power On

1. Turn to the backside. Push the SIM card into the SIM slot.

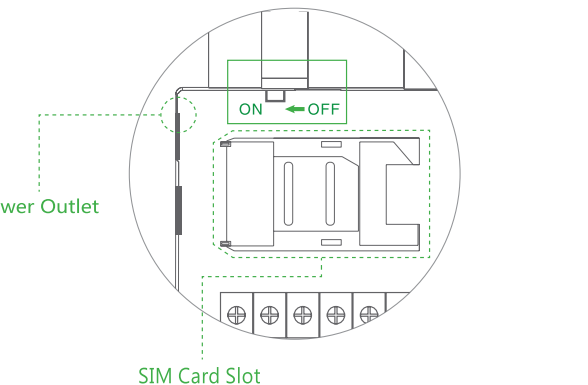

2. Turn the power on, wait for the BEEP sound. The LED panel should show the correct date and time.



3. Power outlet is next to the SIM slot, connect it to the power supply with the cable.

2 Download and Setup Magictl™

Scan or Visit <http://din.bz/m>


Magictl™ is designed to fully control MatiGard™. Works on both iOS and Android.

All processes below need administrator authority.

i. Run Magictl


ii. Follow the guideline to initialize Magictl™, log in.

iii. In **Device Setting**, edit **Alarm Contacts**. It will ring up all contacts and SMS to someone specified when emergency.

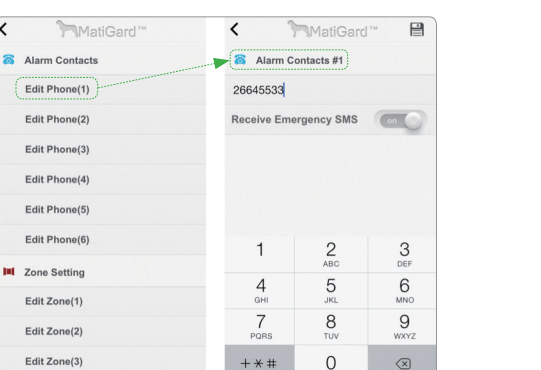

The emergency call will keep calling all contacts recurrently. Press # during the call to stop this process.

Default Admin Password:123456 User Password:1234

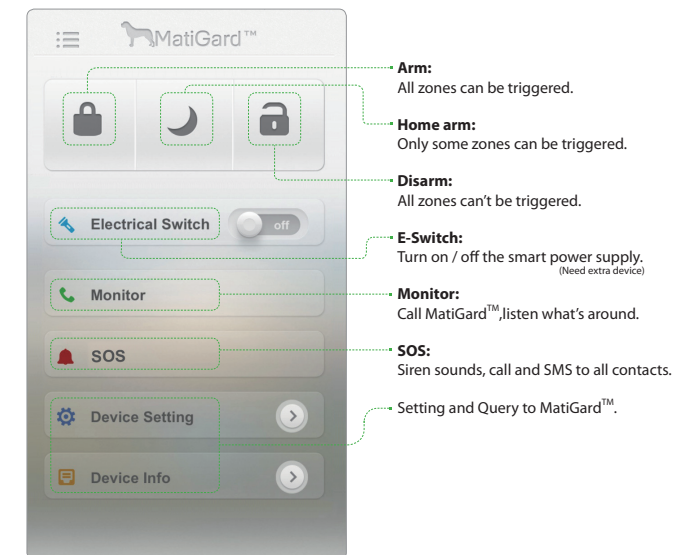


Congratulations!
Now MatiGard™ is guarding your home.

I AM YOUR GUARDER, ALSO YOUR HOUSEKEEPER.
I can tell what's going wrong and where it is.


You can customize the notification SMS for each zone when sensors installed.

Find out the zone number

1. Dial 3# on panel, trigger one sensor.

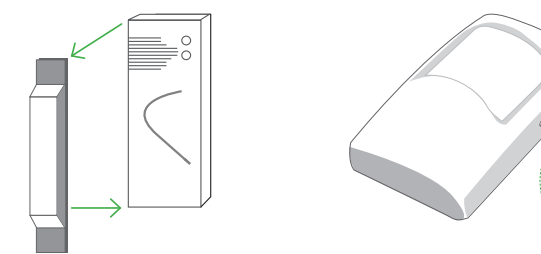

Trigger the door sensor.

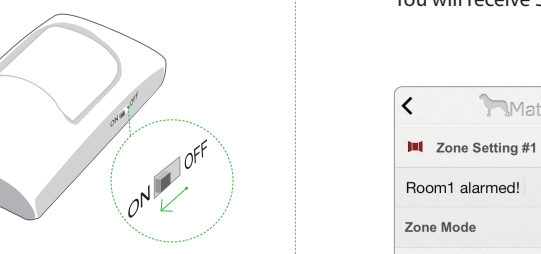

Trigger the PIR detector.

2. The zone number is on the LED display.



I AM YOUR GUARDER, ALSO YOUR HOUSEKEEPER.
I can tell who is in and who is out.

You can customize the informing SMS to represent different action of each remote controller.


Customize the alarm SMS

All processes below need administrator authority.

i. In Magictl™, **Device Setting - Zone Setting**, select the right zone.

ii. Customize the SMS and save.

You will receive SMS alarm in case of emergency.

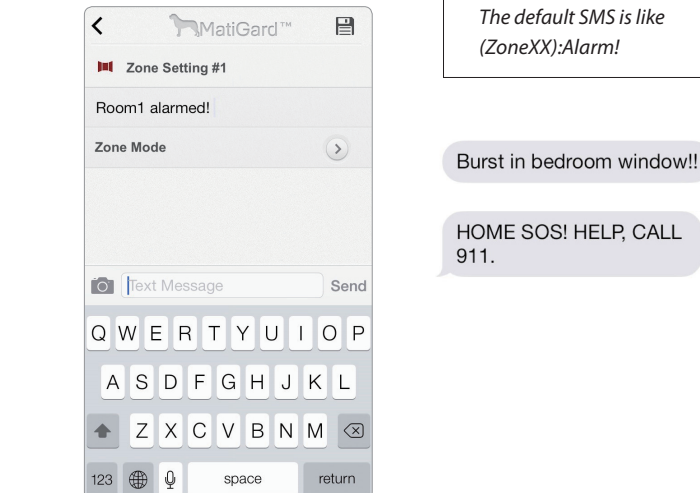

You can also query all the alarm SMS in Magictl.

I AM YOUR GUARDER, ALSO YOUR HOUSEKEEPER.
I can tell who is in and who is out.

You can customize the informing SMS to represent different action of each remote controller.


Customize the informing SMS of remote controller

All processes below need administrator authority.

i. In Magictl™, **Device Setting-Remote Controller Setting**, select the right one.

ii. Customize the arm & disarm SMS and save.

You will receive SMS notification when remote controller send out arm or disarm signal.

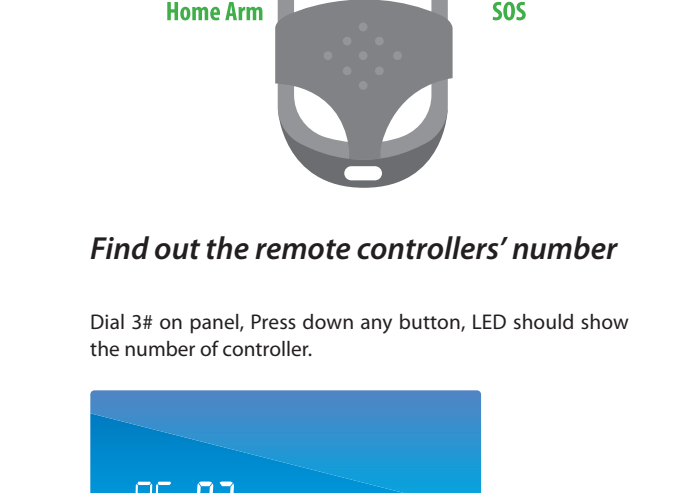

You can query all the SMS for each remote controller in Magictl.

I AM YOUR GUARDER, ALSO YOUR HOUSEKEEPER.
I can tell who is in and who is out.

You can customize the informing SMS to represent different action of each remote controller.


Recommended Installation

All processes below need administrator authority.

i. In Magictl™, **Device Setting-Remote Controller Setting**, select the right one.

ii. Customize the arm & disarm SMS and save.

You will receive SMS notification when remote controller send out arm or disarm signal.

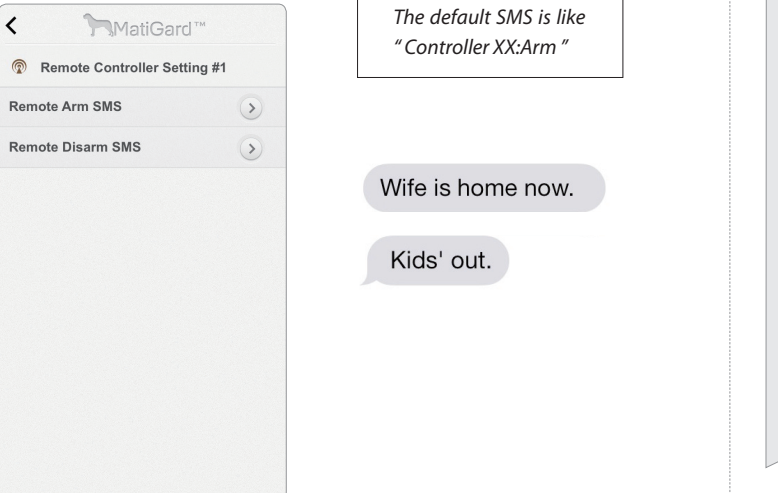

less than 10mm

Magictl™

Available on the iPhone

App Store

ANDROID APP ON

Google play

<http://din.bz/m>



Dinsafe™, MatiGard™, Magictl™ are trade marks of Dinsafe Ltd. ©2013 All rights reserved.
Website : www.dinsafe.com E-mail : info@dinsafe.com

