


720P HD DIGITAL CONCEALED PEN

USER'S MANUAL

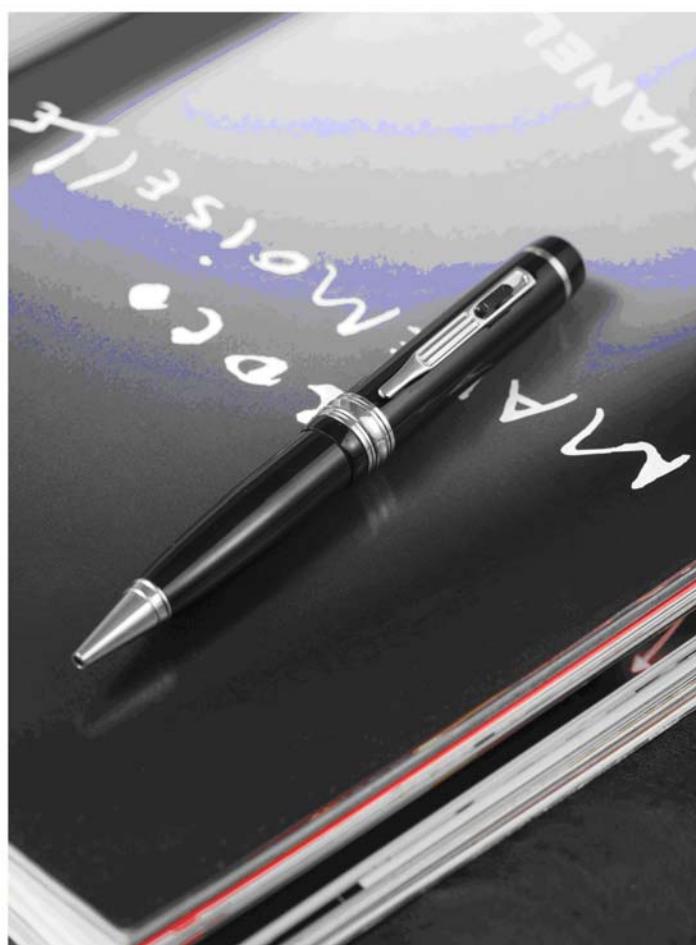


1,Profile

Thanks for you choosing this product.

It is the first HD record pen with Lovely Design,High Resolution Video,excellent Photo, Quality Audio, Webcam and USB Drive.

This multifunctional design is just for Reporters,Emergency records,Record Live clips,Entertainment,Leisure Records,Sports Records,Records of teaching aids,Home security monitoring,Law Enforcement forensic evidence,Travel Records of human scenery,Outdoor adventure records,Auxiliary memory.

2,Structure

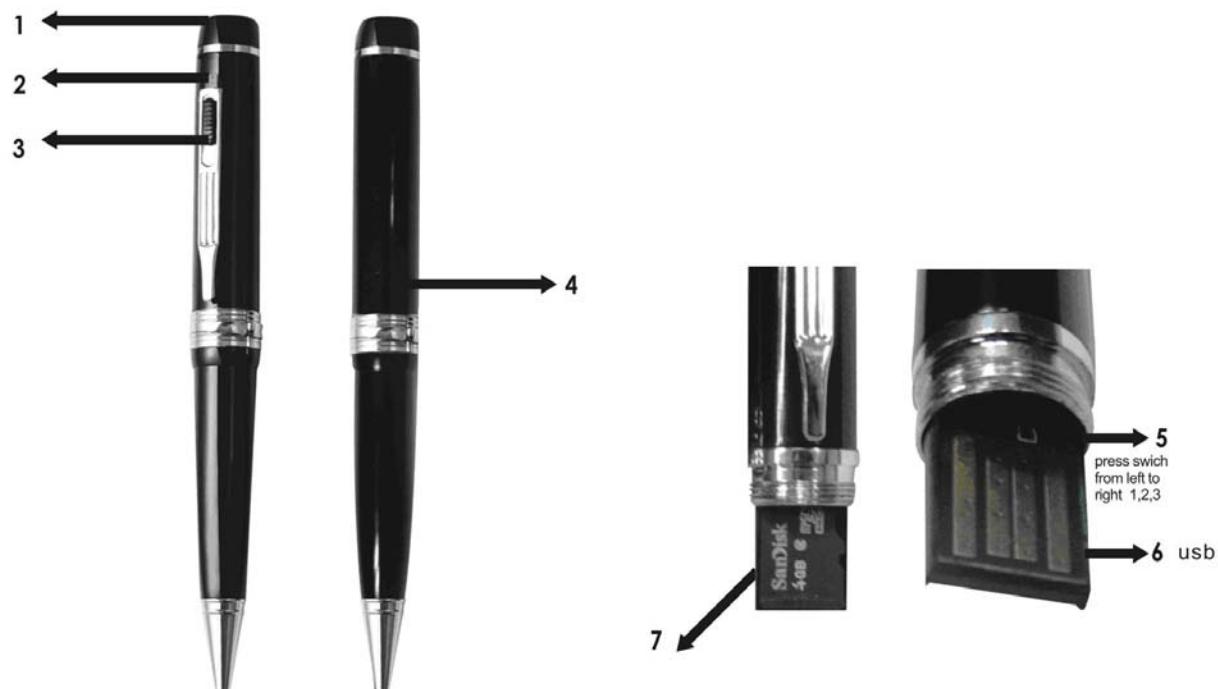

No.	Part	Description
1	Operation Key	It's multifunction key,including:Start Video,Stop video,Snap,Start Audio,Stop Audio.
2	Lence	Taking in Video Signal
3	Microphone	Taking in Audio Signal
4	Indicator	Built-in Blue and Red indicators,it is for indicating the working status.
5	Mode Switch	“①” Turn On,Reset
		“②” Turn On,Photo,Video
		“③” Audio

6	USB Interface	USB Interface
7	Micro SD Slot	SD Card Slot

3,Operation

A, On/Off

1, Turn On

- ◆ After you Switch the Key,5 to ②, the equipment will turn on. The red and blue indicator is burning to enter into the initialization state.
- ◆ After the initialization finish, the red indicator is off.
- ◆ The equipment is in the status of photo, the blue indicator is burning.

Notice:

After you push the key,5 to ②, then, do not operate it until it enters into the photo status.

2, Turn Off

After you switch the Key,5 to ①, the indicators will be off. It means the Equipment is off now.

Notice:

If the equipment is working, please save the file before turning off.

B, Photo

- ◆ After you turn on the equipment, it is in the status of photo standby.
- ◆ If it is in the status of Standby, the blue indicator is burning.
- ◆ When you press the operation key one time, the blue indicator flash one time. It means the equipment take one photo.

Notice:

If you want to get the quality picture, please pay attention to the following experience.

- Please take photo in the lit environment.
- Do not Shake.
- The distance between object and lence should be more than 50cm.

C, Video

- ◆ In the status of Photo Standy, please press the Operation Key for 2 seconds. The red indicator is burning, then start to flash evenly. The blue indicator is off. The equipment enter into the status of video.
- ◆ After you press the operation key again to stop the video and save the file. The flashing red indicator turn off, the blue light is burning.

Notice:

If you want to get the quality video, please pay attention to the following experience.

- Please take photo in the lit environment.
- Do not Shake.
- The distance between object and lence should be more than 50cm.
- Please do not block the micphon to get better audio.

D, Audio

- ◆ Please switch the Key,5 to ③. The equipment will be in the status of Audio Standby. The blue indicator is burning.
- ◆ When you press the Operation Key, it starts to take audio. The burning blue indicator starts to flash evenly.

- ◆ When you press the Operation Key again to stop audio and save the file. The flash blue indicator becomes burning.

Notice:

Do not block the microphone when the equipment is taking audio.

E, Webcam


- ◆ Please switch the Key, 5 to ②, then, connect the equipment to PC.
- ◆ When you open "My Computer", if you can find the sign of webcam. It means the equipment can be used as webcam now.

Notice:

- If it is the first time to use this equipment webcam function, please install the drive program in CD firstly. The drive program only work in the Windows system.
- Because of the unknown reason, sometimes, the computer can not find the webcam. You need to try again the connection.

F, U Disc

- ◆ Please turn off the equipment before connect it to PC. The red indicator will be burning. You can find the U Disc Sign in computer.
- ◆ The files were saved in: Disc\DCIM\100DSCIM

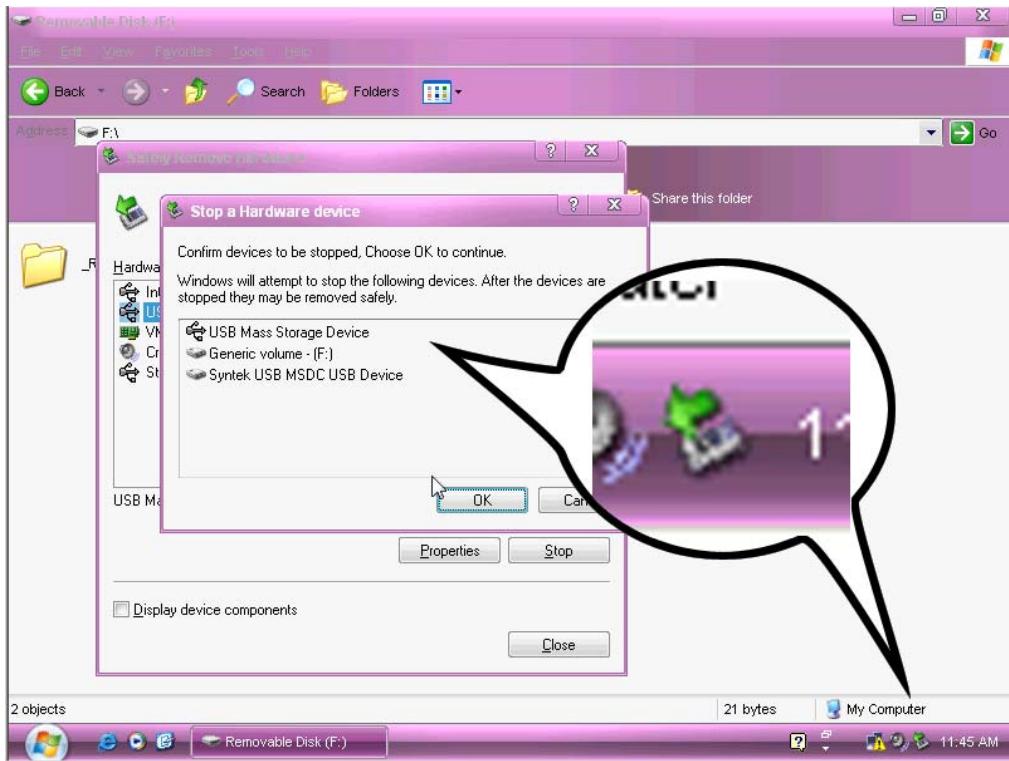

G, Time Reset

- The time is showed as the form: YYYY.MM.DD HH.MM.SS
- Please connect it to PC when the equipment is off. Then, turn on mass storage device, you can set up a new file in the name of "time.txt" (The name must be completely the same as this)
- Open the file you setup, input the time as following form:
YYYY.MM.DD HH.MM.SS
- After you save the file, uninstall the equipment to turn on it again. The time reset finishes.

H, Recharge

Please connect the equipment to PC or Power Supply to recharge it. During recharging, the red indicator flashes slowly. When it is full, the red indicator is burning.

Notice

If it is the first five times charging,please sure the power is out completely.After the indicator show it is full,please keep charging for 30 minutes every time.

4, FAQ

- After switch the Key,5 to ②,but no any answer from the indicator.Why?
Answer :Please inspect if the power is off,please recharge it for some time and try again.
- There are red,blue indicators flashing at the same time,and then,the equipment is off automaticly.Why?
Answer:It means the storage card is full.
- The red and blue indicator are alternately flashing,and the equipment is off automatically.Why?
Answer:It means the equipment can not find the storage card,please try to input the card again.

5, Parameter

Item	Parameter
Video Form	AVI
Video Code	M-JPEG
Video Resolution	1280*720p
Software	mainstream operating system comes with video player software
Photo Form	JPG
Support System	Windows me/2000/xp/2003/vista ; Mac os 10.4 ; Linux ;
Voltage	DC-5V
USB Interface	MINI 5 Pin USB
Memory	Micro SD Card
Battery	Lion Battery

6,Notice

Place of using: It can not be used in the ileagl place.

- Battery: With the using, the time of battery working will be getting shorter and shorter.You must recharge it if you do not use it for long time.
- File Safety: This product is not the proffetional storage equipment,you need backup your file in the other storage equipment.
- Video Quality: This equipment is not the proffetional storage video equipment,we can not promise that the video quality can meet the requirment.
- Working Temperture: 0—40°C。
- Working : Please use it in the luminous plac,please do not let the lence face to the high-light.
- Clearance: Please do not use it in the dust place.You can clean the lence with proffetional paper or glasses cloth.
- Others: Please do not let it impact,quick.Please do not use it magnetic field or electric field.